


# NITEFALL™

## REAR-DEPLOYING BROADHEAD

### RESETTING KICK-OUT BLADES


1. Firmly hold the arrow or threaded part of the ferrule in an upright position.
2. Carefully push up on the bottom of the main fixed blade (Pressing on the non-sharpened edge). This compresses the spring and moves the main blade away from the locking edges of the kickout blades.

**NOTE:** Gravity will let the kickout blades fall back to the closed/shooting position and you are ready to shoot again.

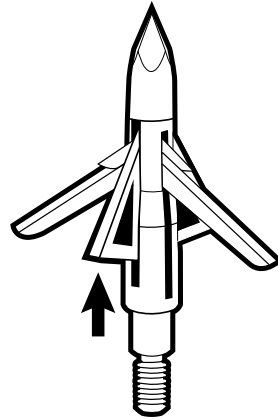

### BLADE REPLACEMENT

1. Unscrew the chisel tip (Be cautious not to lose the spring that is inside of the chisel tip. The spring is under tension).
2. Slide the main blade up exposing the pin that holds the kick-out blades.
3. Carefully remove the pin and replace kick-out blades.
4. Reinstall the pin and main blade.
5. Place the spring over the tab of the main blade and screw on the chisel tip.
6. Reset the kick-out blades in the closed position and you are ready to shoot.

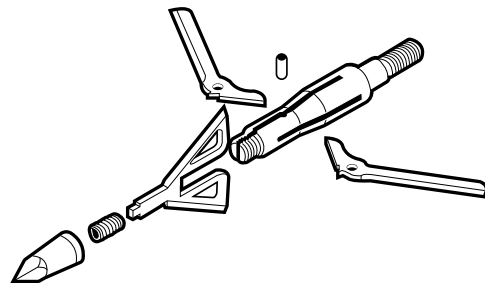

**WARNING:** Blades are extremely sharp.

**BLOODSPORT™**

955 Live Oak Street  
Tarpon Springs, FL 34689

**BLOODSPORTARCHERY.COM**